

Datasheet for JibFlex: JF 50-2

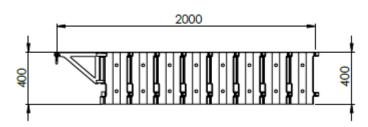


Figure 1: Basic dimensions of JF 50-2.

The lifting eye, called the stork, can be mounted in any module allowing optimisation of every lift. The Stork must always be mounted on the outer module.

The WLL and radius can be seen in the table below:

Module No.	1	2	3	4	5	6	7	8
Lifting Radius [m]	0.585	0.790	0.995	1.200	1.405	1.610	1.815	2.020
WLL [kg]	365	235	165	125	100	80	65	50
Profile Height [m]	0.400	0.400	0.400	0.400	0.400	0.400	0.400	0.400
Profile Mass [kg]	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3
Deflection from WLL [m]	< 0.02	< 0.02	< 0.02	< 0.02	< 0.02	< 0.02	< 0.02	< 0.02



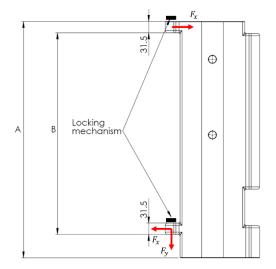


Figure 2: Following structural requirements applies to the supporting structure. The reactions are omnidirectional and characteristic loads that includes dynamic amplification factor (DAF) but without partial coefficients / safety factor.

Figure 3: The JibFlex has a bending radius of 250 mm.

Specifications				
Weight of JibFlex JibFlex modules Stork Total	kg kg kg	57 12 69		
WLL at last module	kg	285		
Max radius	m	2		
Maximum deflection cause by WLL	m	<0.02		
Safety factor including DAF	-	1.95		
Maximum hoist speed	m/s	Unlimited		
Installation requirements A B Fx Fy	m m N	0.400 0.308 6500 7000		
Bending Radius	m	0.25		



Part List

A complete JibFlex consists of the following:

Main Parts

Part Number	ID	Description	Quantity
1	M-400-1	Module 1-8	8
2	S-006	Stork, six holes*	1

Replacements of any main parts requires new load test.

Spare Parts

Part Number	ID	Description	Quantity
3	S-015	Ø19 Lockpins	2
4	S-013	Ø16 Shackle	1
5	S-014	Linchpin	6
6	PB-001	Bushings with flange	16
7	LB-001-1	LockBrackets Ø44 67,5	8
8	LB-008-1	LockBracket tool	1

Spare parts can be replaced during daily maintenance.

Spare Parts, optional

Part Number	ID	Description	Quantity
	S-008	Stork, eight holes	1
	S-003	Delta Stork	1
	WH-001	Flexhose	1
	WH-002	M6 bolt	8
	WH-003	M6 washer	8
	WH-004	Flexhose Clip	8
	AP-001-1	Standard bracket	2

^{*} The standard stork has six holes.