


Datasheet

JibFlex XL 1200-2



Overview and specifications

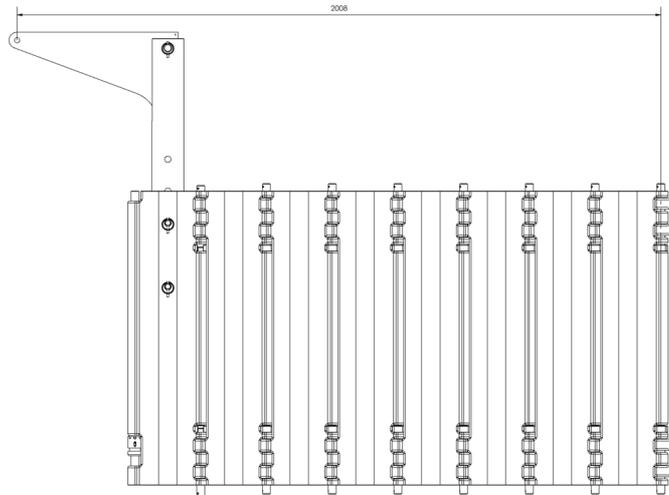

The "Stork" can be mounted on any standard JibFlex module as well as on the Transition Module, enabling optimal placement for each specific lift. The Transition Module must be installed as the final module in any JibFlex XL configuration and will always serve as the interface between JibFlex XL modules and standard JibFlex modules. The Stork must always be mounted on the outermost module of any configuration.

The WLL and working radius can be seen in the table below:

Module No.	Lifting Radius [m]	WLL [kg]	Profile Height [m]	Profile Mass [kg]	Deflection WLL [m]
1	0,572	1200	0,925	17,00	< 0,02
2	0,777	1200	0,925	17,00	< 0,02
3	0,982	1200	0,925	17,00	< 0,02
4	1,187	1200	0,925	17,00	< 0,02
5	1,392	1200	0,925	17,00	0,02
6	1,597	1200	0,925	17,00	0,03
7	1,802	1200	0,925	17,00	0,03
8	2,008	1200	0,925	20,20	0,04

*Note Deflection to be confirmed

Specifications


The technical specifications for the JibFlex system are presented in the table below.

Specification	Value	Unit
Weight of JibFlex		
• JibFlex modules	139	kg
• Stork	16	
• Total	155	
WLL at last module	1200	kg
Max radius	2,008	m
Maximum deflection cause by WLL	0.04	m
Safety factor, self-weight – acc. EN 13001-series	1.34	-
Safety factor, load (WLL) – acc. EN 13001-series	1.65	-
Maximum hoist speed	0.16	m/s


Installation requirements

- 641 mm – spacing between anchor brackets.

The reaction forces are omnidirectional and represent characteristic loads that include a combined safety factor but exclude partial safety coefficients.

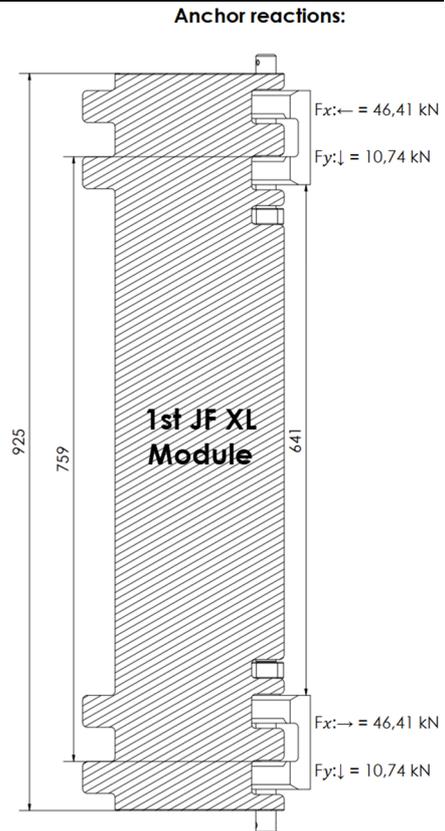

Bending Radius

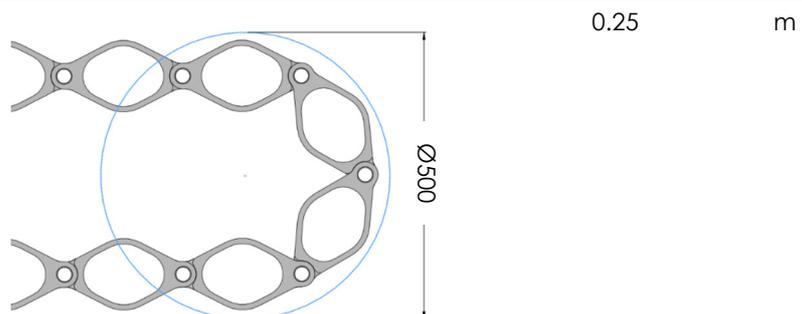

Parts List

This JibFlex configuration consists of the following modules and accessories:

Part NO.	ID	Description	Quantity
1	XL-M925-1	Module 1-7	7
2	XL-T-M925-1	Module 8	1
3	L-015	Heavy duty pin W. Lock	16
4	S-005	Stork, 1200 kgs	1
5	S-015	Lock pins	2
6	S-013	Ø16 Shackle	1
8	S-014	Linch pin	4

Replacements of any modules and/or stork requires a new load test.


Other parts can be replaced during daily maintenance.



Spare parts, optional

ITEM NO.	ID	Description
1	PB-002 Bushing F-21	Igus Bushing with flange
2	PB-003 Bushing S-20	Igus Bushing no flange
3	L-015	Heavy duty pin W. Lock
4	AP-XL-001	XL Anchor point
5	PB-004 Bushing S-15	Igus Bushing no flange

JF XL module illustration

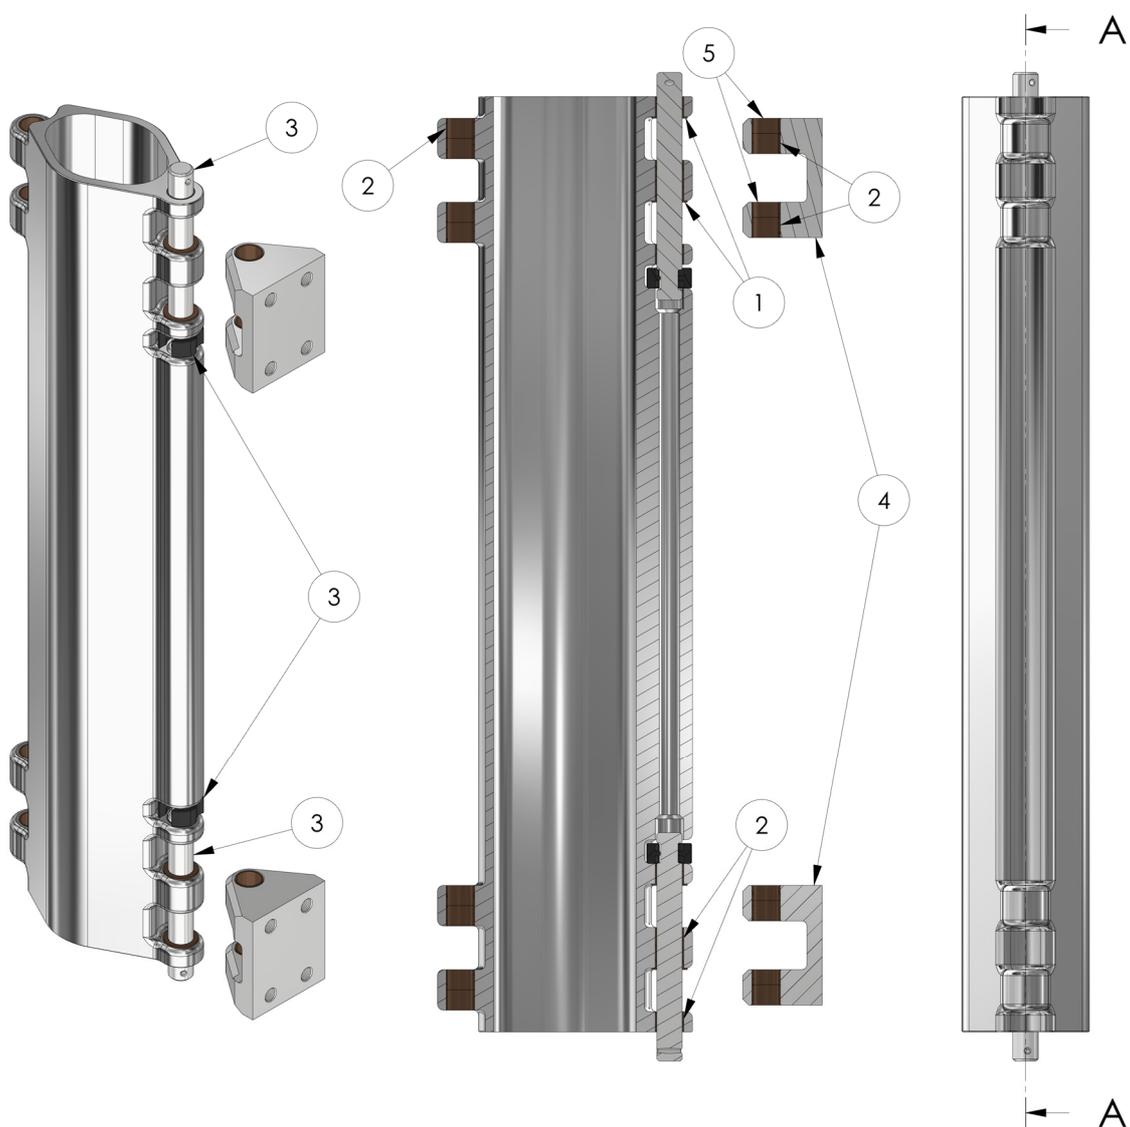

ITEM NO.	ID	Description
6	PB-001 Bushing F-31	Igus Bushing with flange
7	LB-001-1	Lock Brackets
8	AP-001	Std. JF anchor point
9	S-014	Linch pin
-	S-015	Lock pin
-	LB-008-1	Lock Bracket tool

JF Std. module illustration

