


Datasheet

JibFlex XL 600-2



Overview and specifications

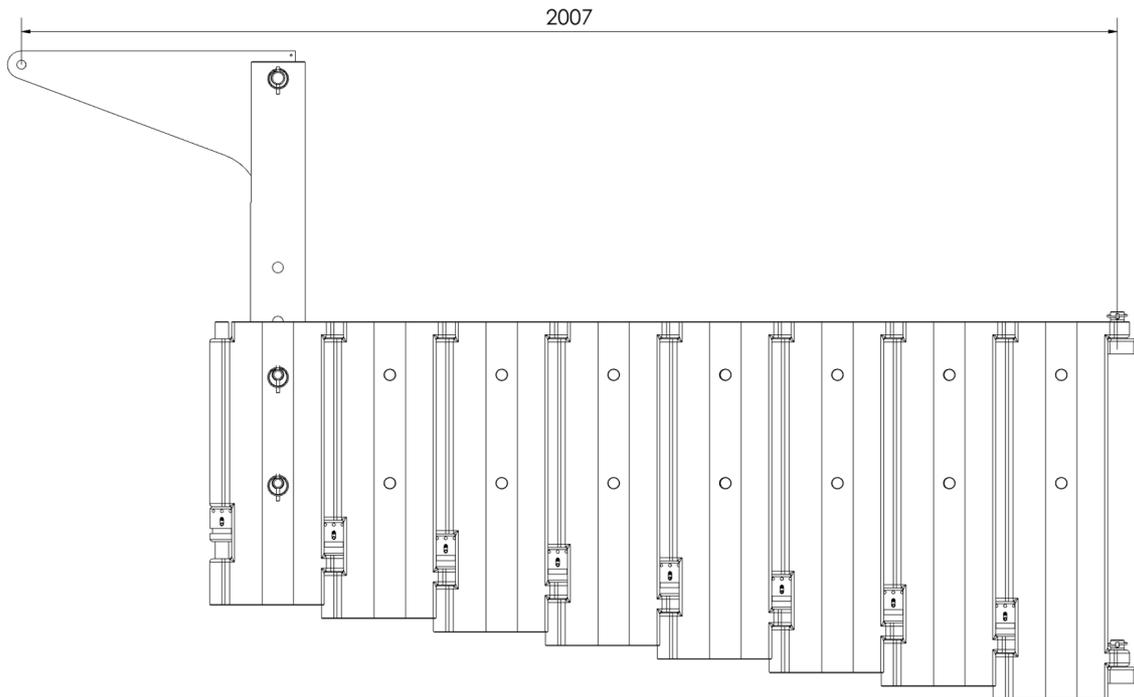

The "Stork" can be mounted on any standard JibFlex module as well as on the Transition Module, enabling optimal placement for each specific lift. The Transition Module must be installed as the final module in any JibFlex XL configuration and will always serve as the interface between JibFlex XL modules and standard JibFlex modules. The Stork must always be mounted on the outermost module of any configuration.

The WLL and working radius can be seen in the table below:

Module No.	Lifting Radius [m]	WLL [kg]	Profile Height [m]	Profile Mass [kg]	Deflection WLL [m]
1	0,572	1190	0,700	11,54	< 0,02
2	0,777	1025	0,675	11,12	< 0,02
3	0,982	900	0,650	10,70	< 0,02
4	1,187	750	0,625	10,28	< 0,02
5	1,392	715	0,600	9,86	0,02
6	1,597	600	0,575	9,44	0,03
7	1,802	600	0,550	9,02	0,03
8	2,007	600	0,525	8,59	0,04

*Note Deflection to be confirmed

Specifications

The technical specifications for the JibFlex system are presented in the table below.


Specification	Value	Unit
Mass of JibFlex		
<ul style="list-style-type: none"> JibFlex modules Stork Total 	81 16 97	kg
WLL at last module	600	kg
Max radius	2	m
Maximum deflection cause by WLL	0.13	m
Safety factor, self-weight – acc. EN 13001-series	1.34	-
Safety factor, load (WLL) – acc. EN 13001-series	1.65	-
Maximum hoist speed	0.16	m/s

Installation requirements


- 578 mm – spacing between anchor brackets.

The reaction forces are omnidirectional and represent characteristic loads that include a combined safety factor but exclude partial safety coefficients.

Anchor reactions:

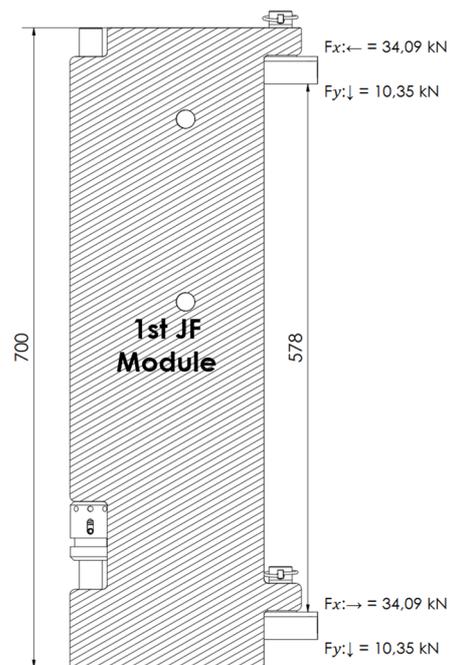

Bending Radius

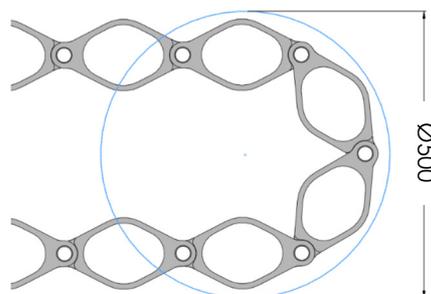

0.25 m

Parts List

This JibFlex configuration consists of the following modules and accessories:

Part NO.	ID	Description	Quantity
1	M-700-1	Module 1	1
2	M-675-1	Module 2	1
3	M-650-1	Module 3	1
4	M-625-1	Module 4	1
5	M-600-1	Module 5	1
6	M-575-1	Module 6	1
7	M-550-1	Module 7	1
8	M-525-1	Module 8	1
9	S-005	Stork, 1200 kgs	1
10	S-015	Lock pins	2
11	S-013	Ø16 Shackle	1
12	LB-008-1	Lock Bracket tool	1
13	S-014	Linch pin	4

Replacements of any modules and/or stork requires a new load test.


Other parts can be replaced during daily maintenance.



Spare parts, optional

ITEM NO.	ID	Description
1	PB-002 Bushing F-21	Igus Bushing with flange
2	PB-003 Bushing S-20	Igus Bushing no flange
3	L-015	Heavy duty pin W. Lock
4	AP-XL-001	XL Anchor point
5	PB-004 Bushing S-15	Igus Bushing no flange

JF XL module illustration

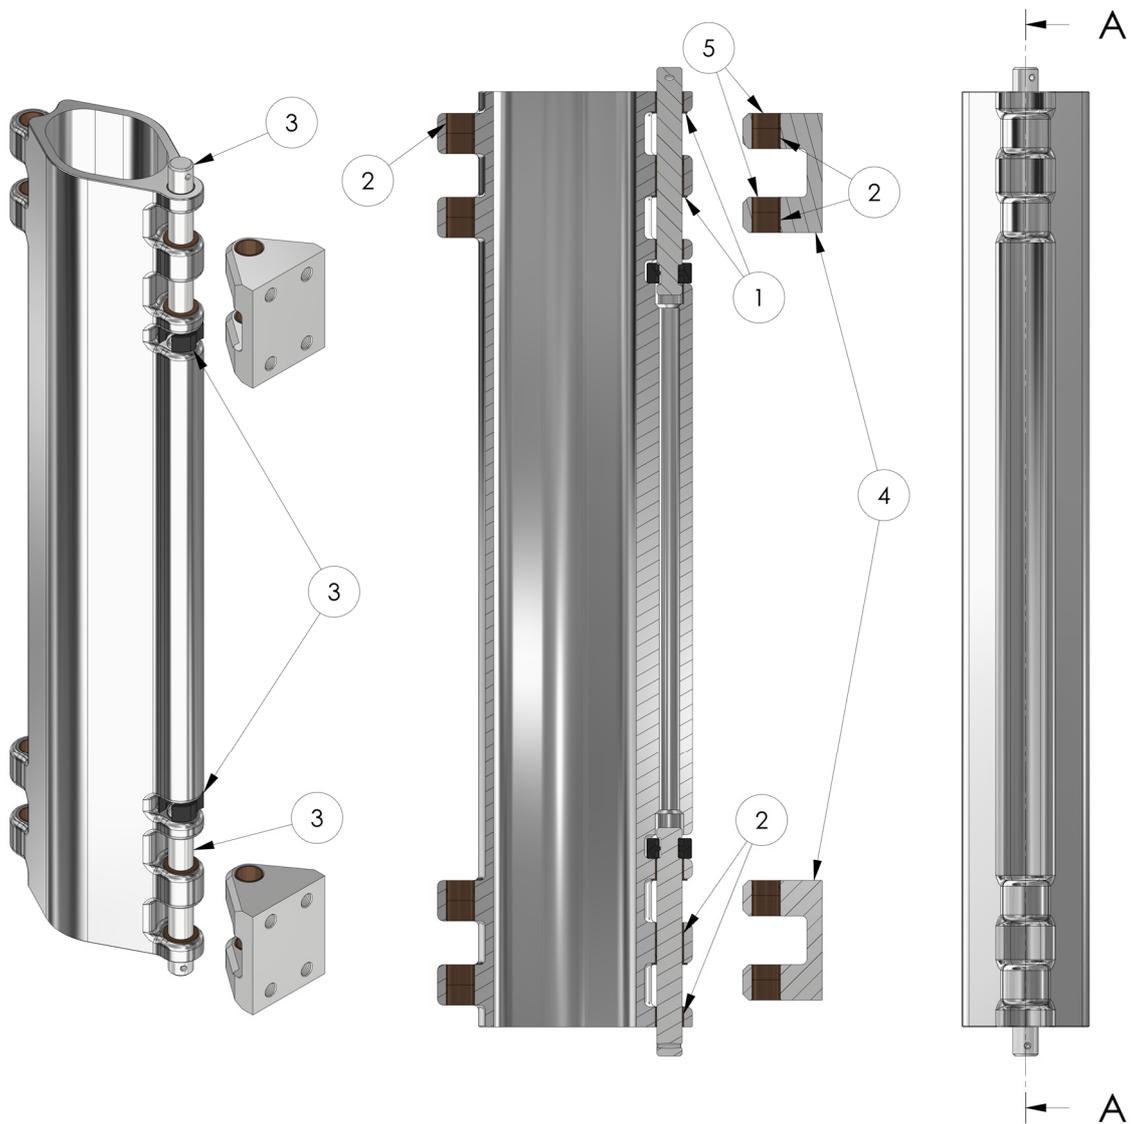

ITEM NO.	ID	Description
6	PB-001 Bushing F-31	Igus Bushing with flange
7	LB-001-1	Lock Brackets
8	AP-001	Std. JF anchor point
9	S-014	Linch pin
-	S-015	Lock pin
-	LB-008-1	Lock Bracket tool

JF Std. module illustration

