


Datasheet

JibFlex XL 600-3



Overview and specifications

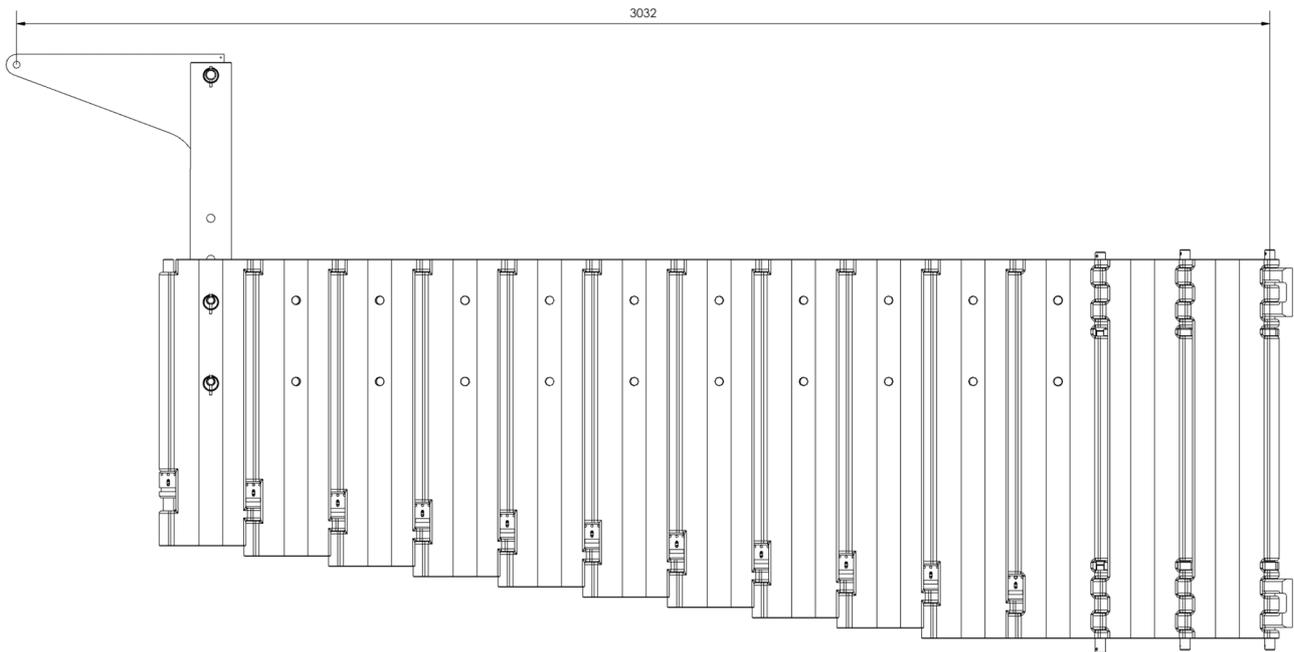

The "Stork" can be mounted on any standard JibFlex module as well as on the Transition Module, enabling optimal placement for each specific lift. The Transition Module must be installed as the final module in any JibFlex XL configuration and will always serve as the interface between JibFlex XL modules and standard JibFlex modules. The Stork must always be mounted on the outermost module of any configuration.

The WLL and working radius can be seen in the table below:

Module No.	Lifting Radius [m]	WLL [kg]	Profile Height [m]	Profile Mass [kg]	Deflection WLL [m]
1	0,572	1200	0,975	17,00	< 0,02
2	0,777	1200	0,975	17,00	< 0,02
3	0,982	1200	0,950	20,20	< 0,02
4	1,187	1200	0,925	15,33	< 0,02
5	1,392	1200	0,900	14,90	0,02
6	1,597	1200	0,875	14,48	0,03
7	1,802	1200	0,850	14,06	0,03
8	2,007	1190	0,825	13,64	0,04
9	2,212	1025	0,800	13,22	0,04
10	2,417	900	0,775	12,80	0,05
11	2,622	750	0,750	12,38	0,05
12	2,827	715	0,725	11,96	0,06
13	3,032	600	0,700	11,54	0,06

*Note Deflection to be confirmed



Specifications


The technical specifications for the JibFlex system are presented in the table below.

Specification	Value	Unit
Mass of JibFlex		
• JibFlex modules	189	kg
• Stork	16	
• Total	205	
WLL at last module	600	kg
Max radius	3	m
Maximum deflection cause by WLL	0.13	m
Safety factor, self-weight – acc. EN 13001-series	1.34	-
Safety factor, load (WLL) – acc. EN 13001-series	1.65	-
Maximum hoist speed	0.16	m/s


Installation requirements

- 641 mm – spacing between anchor brackets.

The reaction forces are omnidirectional and represent characteristic loads that include a combined safety factor but exclude partial safety coefficients.

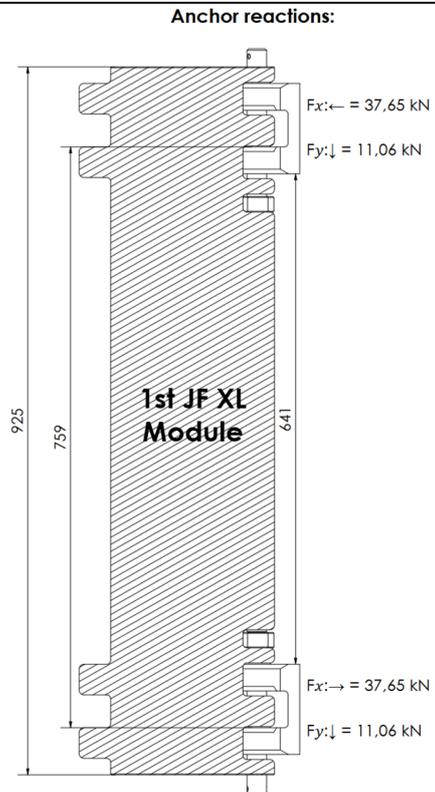

Bending Radius

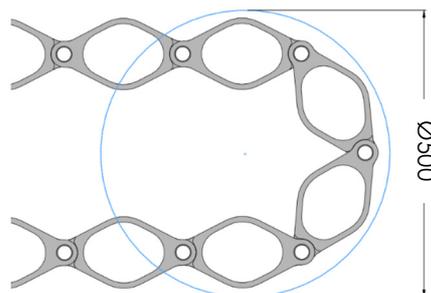

0.25 m

Parts List

This JibFlex configuration consists of the following modules and accessories:

Part NO.	ID	Description	Quantity
1	XL-M925-1	Module 1-2	2
2	XL-T-M925-1	Module 3	1
3	M-925-1	Module 4	1
4	M-900-1	Module 5	1
5	M-875-1	Module 6	1
6	M-850-1	Module 7	1
7	M-825-1	Module 8	1
8	M-800-1	Module 9	1
9	M-775-1	Module 10	1
10	M-750-1	Module 11	1
11	M-725-1	Module 12	1
12	M-700-1	Module 13	1
13	L-015	Heavy duty pin W. Lock	6
14	S-005	Stork, 1200 kgs	1
15	S-015	Lock pins	2
16	S-013	Ø16 Shackle	1
17	LB-008-1	Lock Bracket tool	1
18	S-014	Linch pin	4

Replacements of any modules and/or stork requires a new load test.


Other parts can be replaced during daily maintenance.



Spare parts, optional

ITEM NO.	ID	Description
1	PB-002 Bushing F-21	Igus Bushing with flange
2	PB-003 Bushing S-20	Igus Bushing no flange
3	L-015	Heavy duty pin W. Lock
4	AP-XL-001	XL Anchor point
5	PB-004 Bushing S-15	Igus Bushing no flange

JF XL module illustration

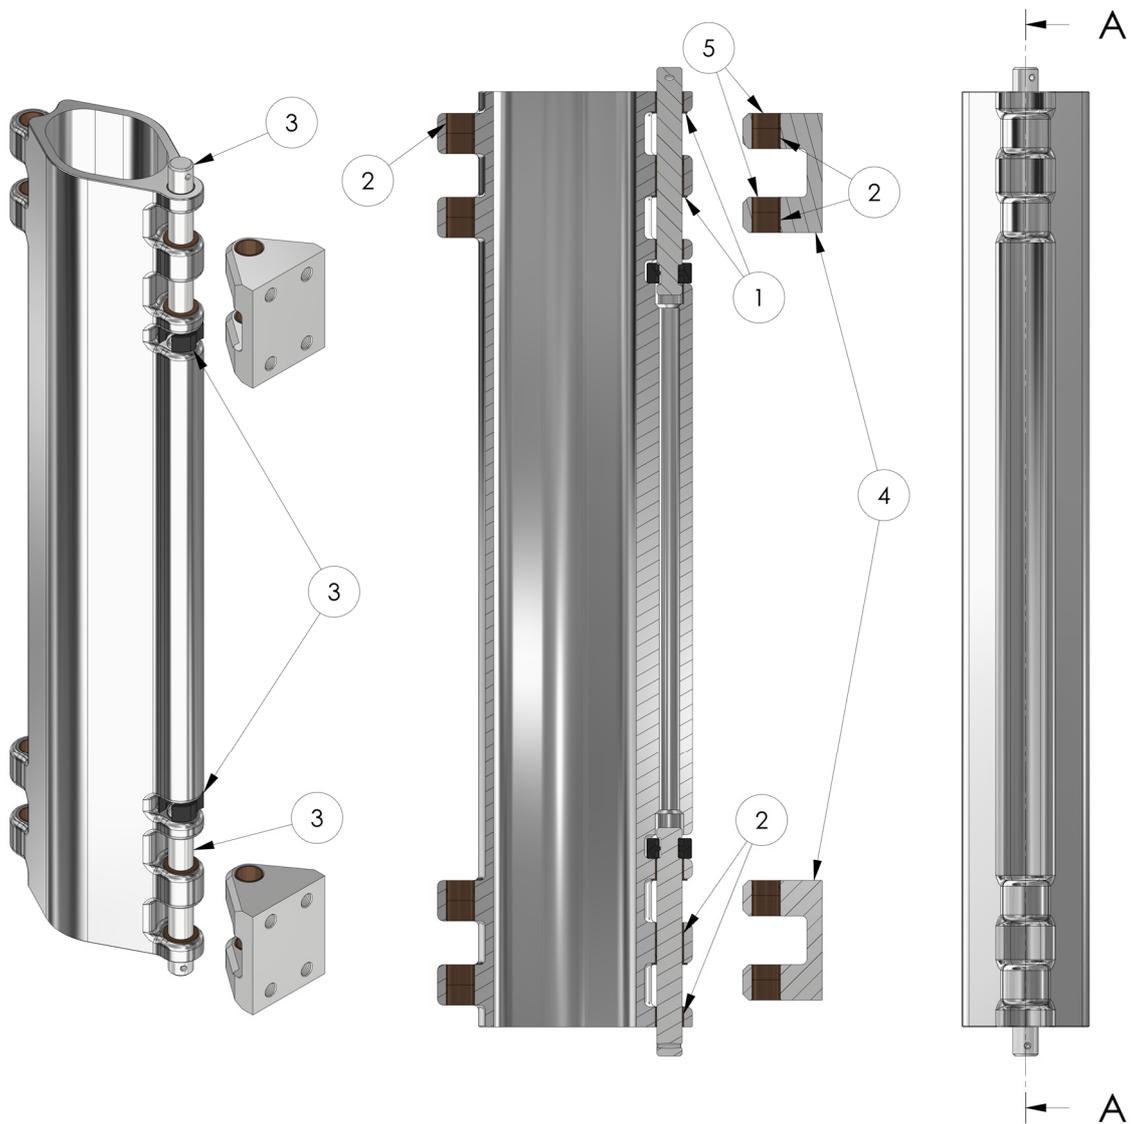

ITEM NO.	ID	Description
6	PB-001 Bushing F-31	Igus Bushing with flange
7	LB-001-1	Lock Brackets
8	AP-001	Std. JF anchor point
9	S-014	Linch pin
-	S-015	Lock pin
-	LB-008-1	Lock Bracket tool

JF Std. module illustration

